

User's Manual

Digital Camera

Fuji FinePix E550

Document ID: PUB-111

Revision B



The names of any providers and patients used in illustrations in this document fictitious. Any medical information shown was created for the sake of illustrating the capabilities of the software.

Every effort has been made to ensure this manual is accurate, complete, and useful. Please notify us of any errors, omissions, or suggestions for improvement using any method of contact listed below:

AFHCAN
Training Department
4000 Ambassador Drive
Anchorage, AK 99508

Phone: 907 729-2260
Fax: 907 729-2269
Email: customersupport@afhcan.org

Copyright © 2006 Alaska Native Tribal Health Consortium. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, including photocopying, electronic, mechanical, recording or otherwise, without the prior written permission of Alaska Native Tribal Health Consortium.

Table of Contents

Section	Title	Page
Preface		v
	About this Document	v
	Related Documents	v
	For More Information	v
Section 1 – Introduction		1
1.1	Becoming Familiar with the Camera	1
1.1.1	Digital Photography and the AFHCAN Cart	1
1.1.2	Main Parts of the Digital Camera	1
1.1.3	Camera and Cradle	7
1.2	Introduction to Menus	8
1.3	Standard Settings of the Camera	9
1.4	Particulars of the AFHCAN Installation	10
1.4.1	Advantages	10
1.4.2	Precautions	10
Section 2 – Operation		11
2.1	Basic Procedure for Taking a Picture	11
2.2	Basic Procedure for Downloading an Image	12
2.2.1	Saving Multiple Images	14
2.3	Procedures for Using Other Camera Features	15
2.3.1	Setting Date and Time	15
2.3.2	Viewing Images on Camera	16
2.3.3	Taking Close-Ups with the Macro Function	17
2.3.4	Using the Flash	17
2.3.5	Special Features	17
2.3.6	Shooting Video Clips	18
2.4	Erasing Images from Camera's Memory	18
Section 3 – Clinical Considerations		21
3.1	Characteristics of a Good Clinical Photograph	21
3.2	Common Mistakes	22
3.3	Tips and Tricks	22
Section 4 – Routine Maintenance		23
4.1	Changing the Batteries	23
4.2	Replacing the xD Memory Card	23

List of Illustrations

Figure	Title	Page
1	User controls on the top of the camera	1
2	User controls on the back of the camera	2
3	Features on the front of the camera	2
4	Features on the viewfinder side of the camera	3
5	Features on the wrist strap side of the camera.....	3
6	Features on the bottom of the camera.....	3
7	Flash up and lens extended.....	4
8	Battery / media card compartment	4
9	Camera and cradle installed on Cart.....	7
10	Menu features	8
11	Controls governing menu availability	9

List of Tables

Table	Title	Page
1	Functions of key controls	5
2	Standard settings.....	9
3	Maximum and minimum focus distances for normal and macro modes.....	17
4	Attributes of a poor, good, and best quality photograph	21

Preface

About this Document

This document is part of the set of user manuals provided with an AFHCAN Cart. These user manuals, covering various topics, are normally assembled into a binder delivered with each Cart. This modular design has the following advantages:

- the set of manuals provided with your cart includes documents for the specific peripheral devices installed
- separate documents for specific makes and models of peripheral devices can be developed
- each document is a stand-alone publication, so as new devices or features are added to the Cart, new manuals can be added to the existing binder
- user information that is common to all items of equipment does not need to be repeated in each module, but can be covered in separate modules and referenced as needed

Related Documents

This document assumes you have read the introductory hardware and software manuals included in this binder.

The original Fuji manuals provided with the camera were included in a set of materials delivered with the AFHCAN Cart. Consult those manuals for details of operation not covered in this document.

For More Information

This document describes the Fuji FinePix E550 camera to a level of detail that will meet most user's needs in the context of clinical use of the AFHCAN Cart. For descriptions of the advanced features of the camera, refer to the original Fuji user documentation supplied with the cart. Information can also be found at Fuji's website:

<http://home.fujifilm.com/products/digital/>

Section 1 – Introduction

1.1 Becoming Familiar with the Digital Camera

1.1.1 Digital Photography and the AFHCAN Cart

When communicating with another healthcare provider about a patient, it is often helpful to send one or more pictures of an injury, rash, or other visible condition. The Fuji FinePix E550 digital camera produces a high-resolution image with good color quality. Many automated features make the camera easy to use. Direct installation on the AFHCAN Cart makes the process of downloading digital images very straightforward. The AFHCAN Software works directly with the camera to incorporate digital images into a case.

Unlike other medical peripherals on the AFHCAN cart, which produce specialized medical images (such as the video otoscope), the digital camera is a general purpose device. Anything visible to the naked eye can be photographed and brought into the patient's case.

Clinical photography is practical, whereas other types of photography may be artistic. In both types, the goal of photography is to benefit the audience. In clinical photography, think about how the image tells the story of the patient's condition. Will the receiving provider have the information he or she needs to understand the symptoms? Section 3 gives pointers on how to obtain a good clinical photograph.

1.1.2 Main Parts of the Digital Camera

Figures 1 through 8 illustrate the main items on the camera.

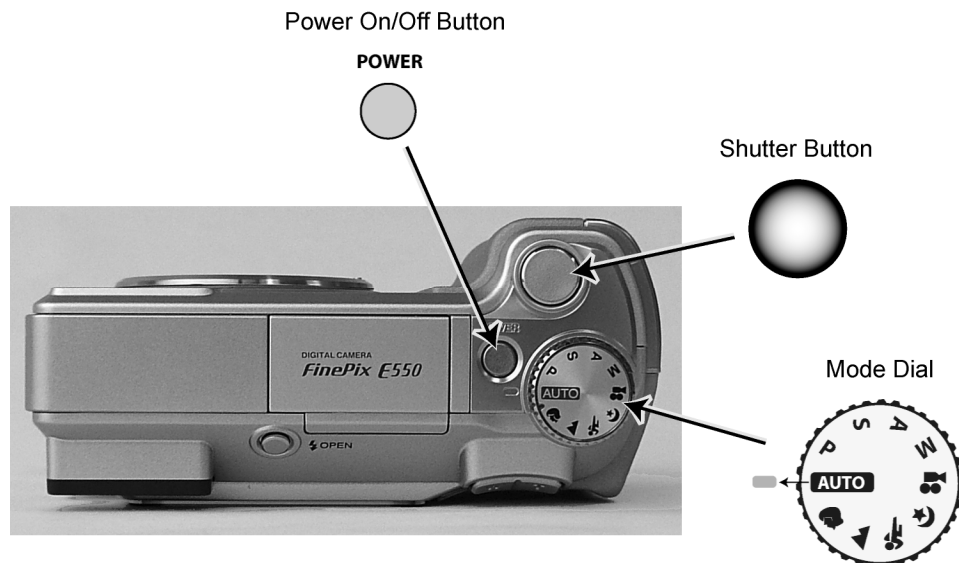


Figure 1
User controls on the top of the camera

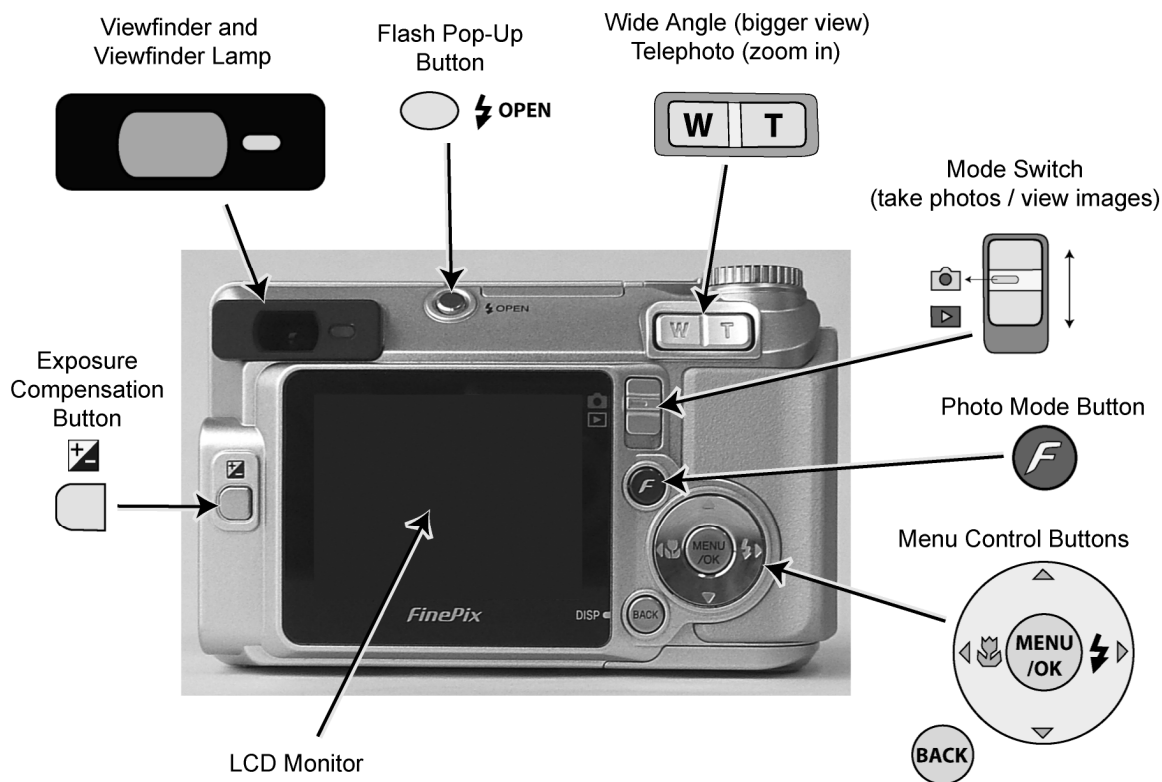


Figure 2
User controls on the back of the camera

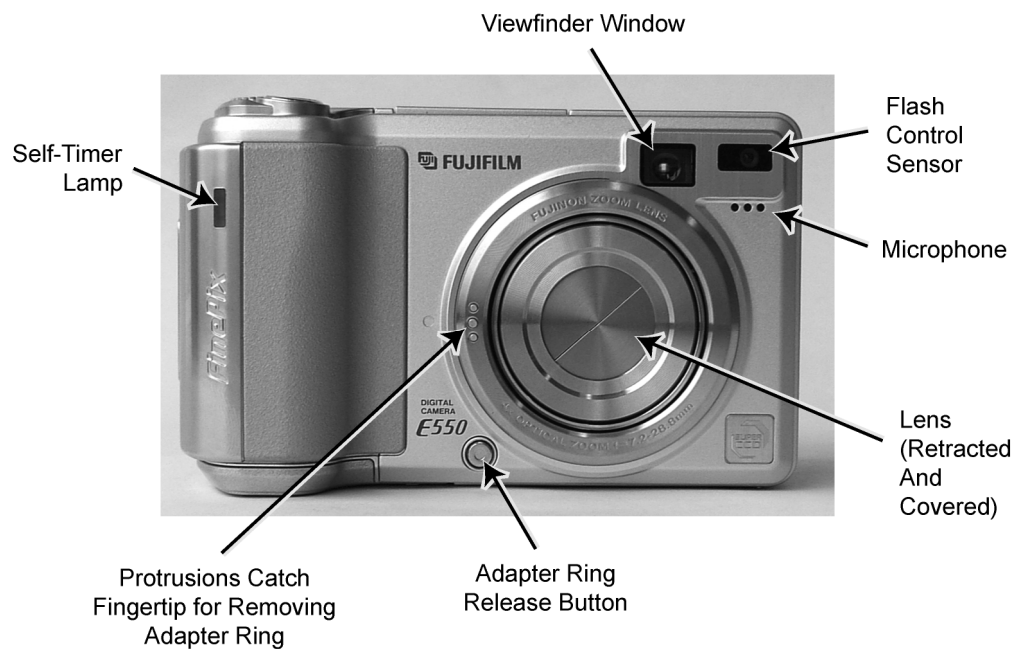
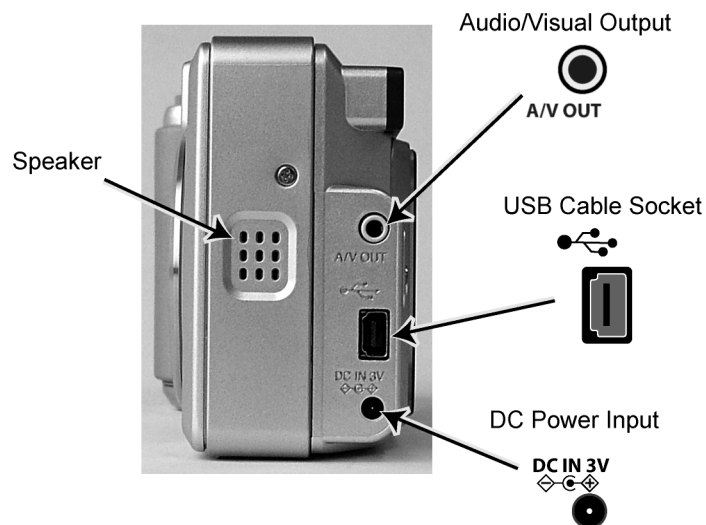


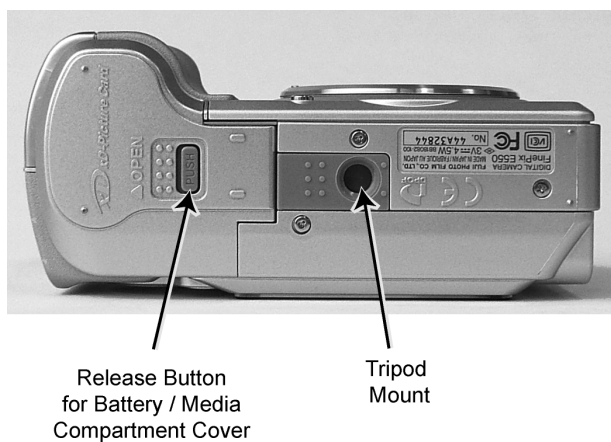
Figure 3
Features on the front of the camera

**Figure 4**

Features on the viewfinder side of the camera

**Figure 5**

Features on the wrist strap side of the camera

**Figure 6**

Features on the bottom of the camera

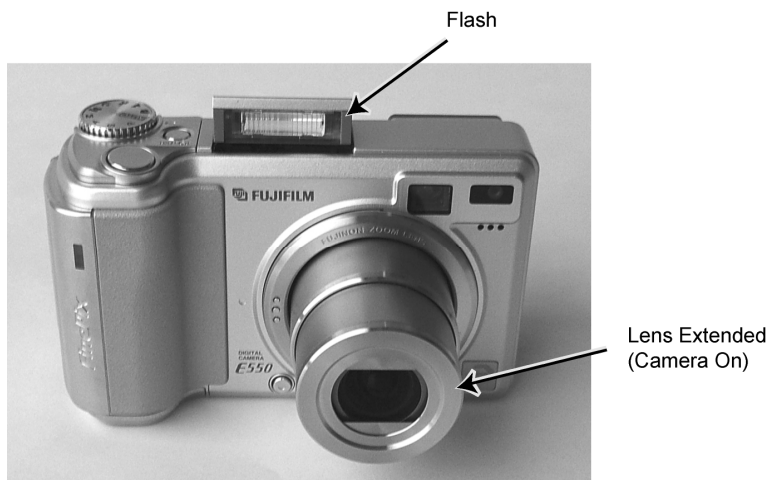


Figure 7
Flash up and lens extended

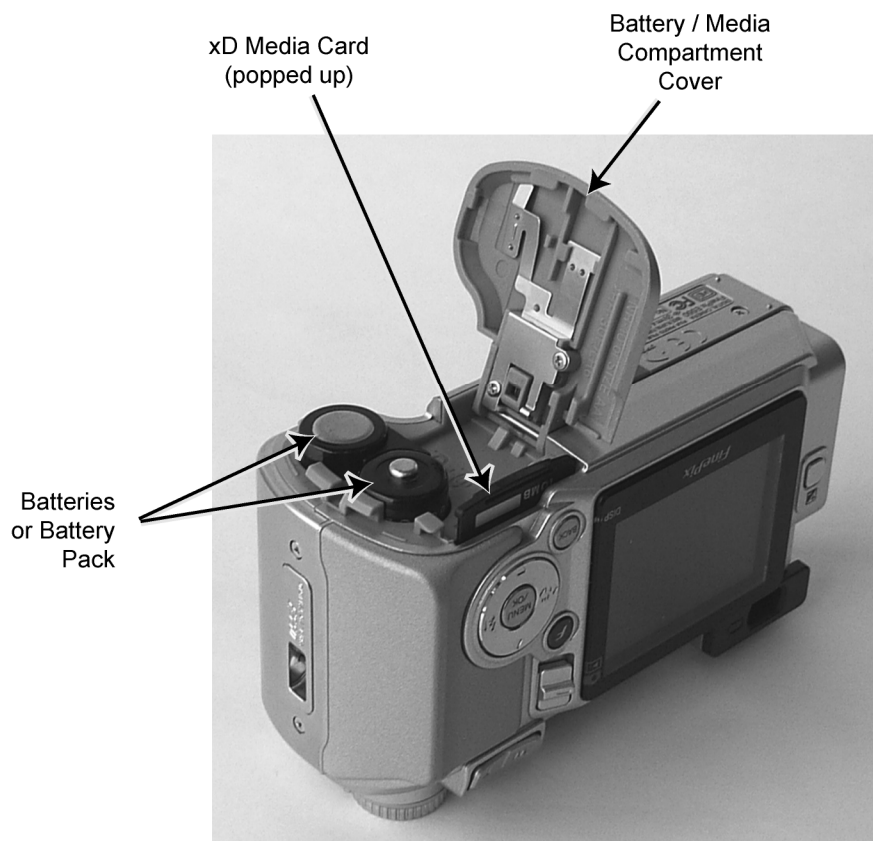
 
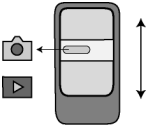
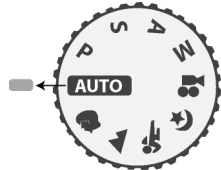



 



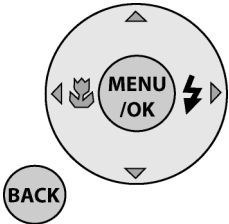





 
Figure 8
Battery / media card compartment

Table 1 briefly introduces the function of most controls. Emphasis is placed on items that are more likely to apply to clinical photography and using the camera in conjunction with the AFHCAN Cart. More information on controls and other features can be found in the Fuji Owner's Manual.

Table 1

Functions of key controls

Graphic	Name	Function	Figure
	Power On/Off Button	Turns camera on and off. Out of cradle, lens extends when camera turned on. In cradle, lens does not extend, but LCD screen indicates USB, and cradle light shows green.	1
	Mode Switch	When up, camera is in photography mode and is ready to take pictures. When down, camera is in viewing mode, and images in camera's memory can be viewed in the LCD display.	2
	Mode Dial	Selects how the camera will control shutter speed, focus, and other factors affecting image quality under different situations. Settings include close-ups, distance shots, action shots, night shots. Video can be selected. Some selections allow manual control of shutter speed, etc. AUTO works for most situations. (Refer to Fuji Owner's Manual for details.)	1
	Viewfinder and Viewfinder Lamp	Window in viewfinder can be used for aiming the camera. (The LCD display can also be used for aiming.) The viewfinder lamp indicates whether the camera is ready to take a photo.	
	Shutter Button	Activates the shutter to take a picture. When pressed halfway down, activates automatic focusing.	1
	Flash Pop-Up Button	Allows the flash to pop up. To turn off the flash, push the flash back down into the camera body.	2
	Wide Angle / Telephoto	T zooms in for close-ups. W zooms out to include a wider view of the scenery.	2
	Photo Mode	In photography mode (Mode Switch up), selects the image quality (resolution).	2

Graphic	Name	Function	Figure
	Menu Control Buttons	<p>Provides menu access, menu navigation, image navigation, and other functions depending on the situation.</p> <p>The MENU/OK and the BACK buttons are separate buttons. In addition, the MENU/OK button is surrounded by a floating ring that tips when you press the top, bottom, left, or right. The floating ring is used to activate functions, navigate through menu selections, or sequence through images.</p> <p>Details on the parts of the Menu Control Buttons are provided below (names in italics).</p>	2
	<i>Macro</i>	In photography mode, activates macro focusing for close-ups. Focuses from 3 inches to 2.6 feet.	2
	<i>Flash Options</i>	When the flash is up, toggles through various flash modes, including auto flash control, red-eye reduction, and forced flash.	2
	<i>MENU / OK</i>	Push to bring up menus in the LCD display. If a menu is displayed, push to accept the current selection.	2
	<i>BACK</i>	Exits the menu screens without making changes to the settings, or steps backward in a sequence.	2
	<i>Left / Right</i>	In viewing mode, sequentially moves forward or back through the photographs in memory. When a menu is displayed, moves to different menu pages.	2
	<i>Up / Down</i>	Moves up or down through menu items.	2

1.1.3 Camera and Cradle

The camera is normally placed in a cradle mounted just above the media reader on the right side of the keyboard shelf (Figure 9). (On the V3 cart, the cradle is mounted in the lower drawer.)

The cradle serves four purposes:

- secures the camera to the cart
- provides a convenient location for accessing the camera
- delivers power to the camera for recharging the batteries (use rechargeable-type batteries only)
- provides a USB connection to the computer so images can be downloaded

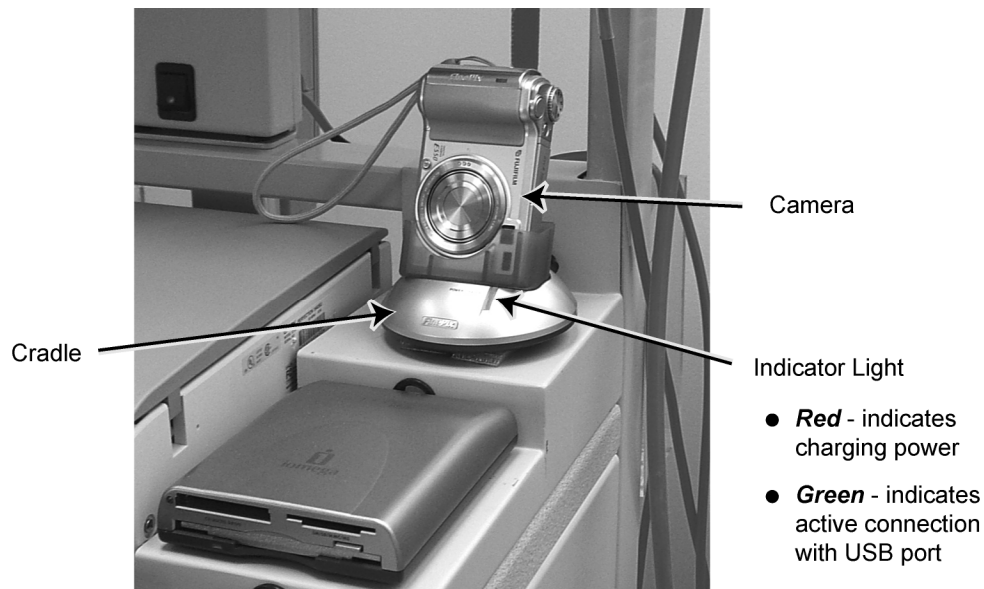


Figure 9

Camera and cradle installed on V1 Cart

Setting the camera in the cradle involves aligning the connection tab in the cradle with the USB connector port on the camera. Once the tab and port are aligned correctly, it is easy to seat the camera in the cradle.

There are two cables connecting into the cradle: a power cable, and a USB signal cable.

Although not used on the AFHCAN Cart, the camera also has connection points for power and a USB cable. These are located on the viewfinder side, as previously shown in Figure 4. The cables used with these two connection points are not the same as the power and USB cables used with the cradle.



When the AFHCAN Cart is powered up, power will be supplied to the cradle. If the camera is seated in the cradle and the battery is charging, the cradle's indicator light will be red. To download images from the camera to the computer, it is necessary to turn the camera on while it is in the cradle. When the camera is on, the cradle indicator light shows green, indicating that the camera is communicating with the computer.

1.2 Introduction to Menus

The menu system on a modern digital camera can seem complex. Learning how to navigate through the menus and menu items is important. You can explore the menus without making changes to the settings by using the arrow buttons and the **BACK** button.

Figure 10 introduces some of the basic features of the menus.

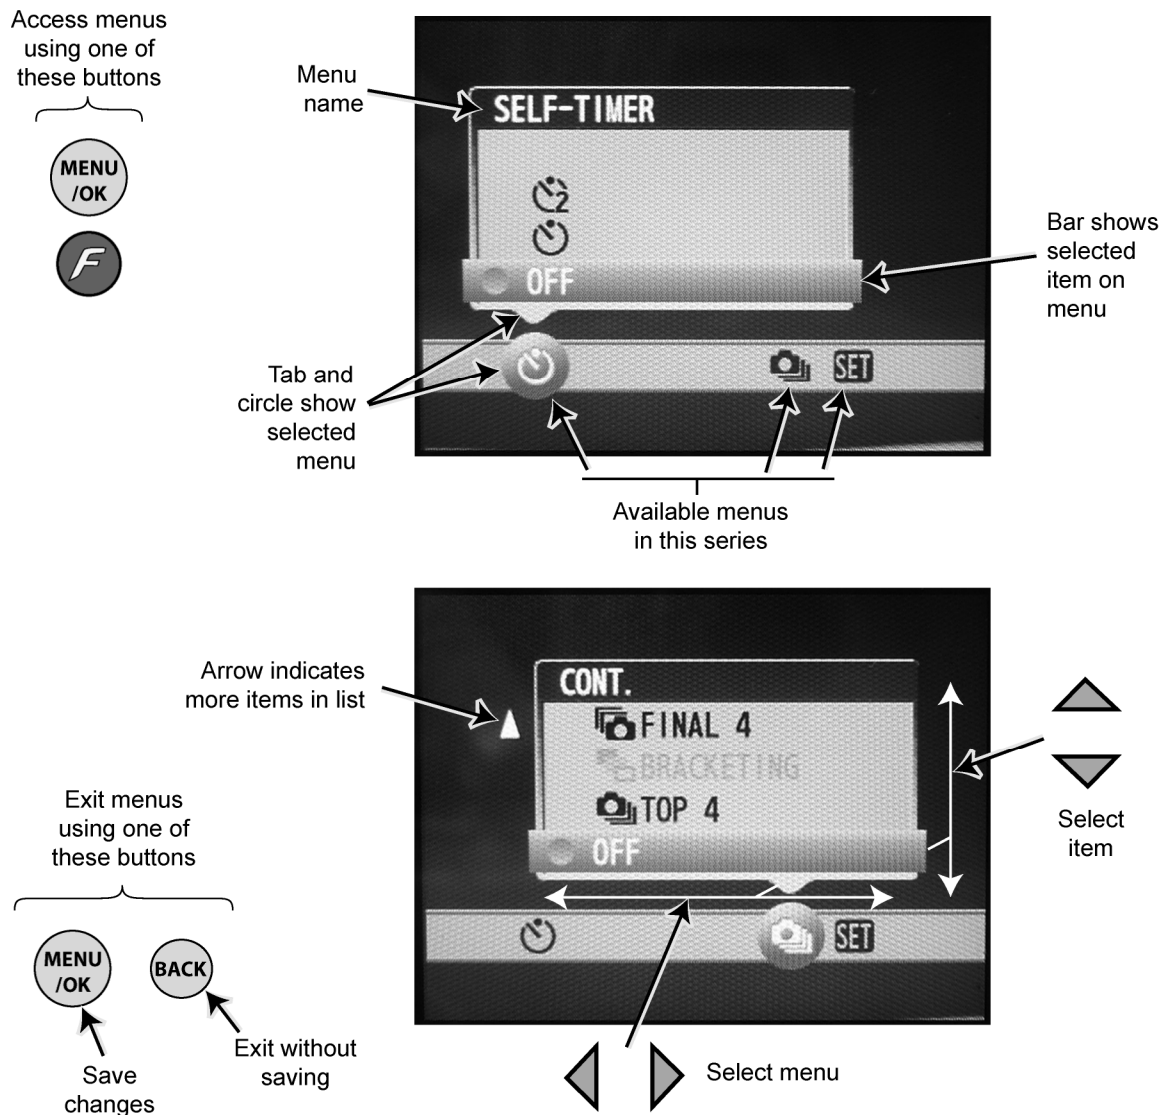


Figure 10
Menu features

There are numerous menus available in the camera. At any given time only a subset of the menus can be accessed depending on how various controls are set. Figure 11 shows the controls that work in combination with each other to determine which menus will appear. It is worthwhile to experiment and see which menus come up with different combinations of control settings.

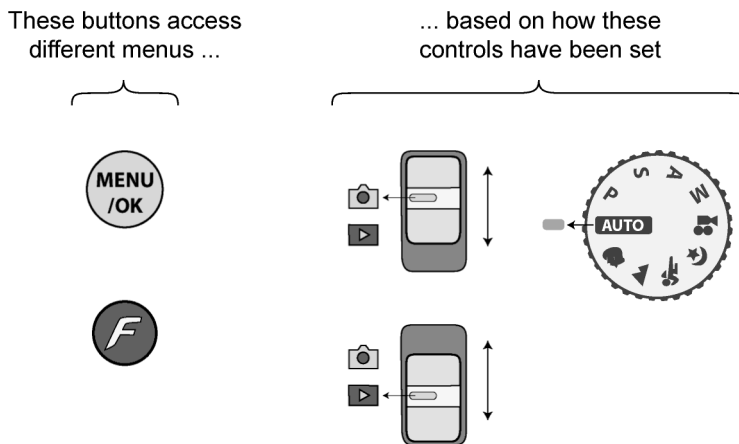


Figure 11
Controls governing menu availability

1.3 Standard Settings of the Camera

Table 2 shows the switch positions and menu settings that are standard for the AFHCAN application. These settings will work for a wide range of clinical situations. Unless otherwise noted, all instructions in this document assume these settings as a starting point.

Table 2
Standard settings

Item	Graphic	Setting
Date and Time		Set to current date and time.
Mode Dial		Auto.
Flash		Down unless lighting conditions are poor.
Mode Switch		Up (photo mode).
Image Quality		

1.4 Particulars of the AFHCAN Installation

By incorporating the camera directly onto the AFHCAN Cart, the camera becomes part of an integrated system. Any significant differences between the operation of the camera as installed and an off-the-shelf version of the same product will be described as needed.

1.4.1 Advantages

Mounting the camera and cradle directly onto the AFHCAN Cart provides many conveniences for the user:

- When the camera is in the cradle and the cart is on, the camera is automatically being recharged.
- The cradle is permanently connected to the computer for easy downloading of images.
- AFHCAN Software has been designed to work directly with the camera making it easy to add digital images to a case.

1.4.2 Precautions

Please observe the following precautions:


- Lock the camera in the AFHCAN Cart drawer when the Cart is not in use.
- Never open the battery compartment while the camera is turned on.
- Use only the rechargeable batteries that come with the camera. Normal alkaline batteries are not rechargeable. If you install alkaline batteries in the camera and place the camera in the cradle, a charging current will be applied to the batteries and the camera will be damaged.
- There is no need to open the battery/card compartment to access the media card in the camera. Images can be downloaded directly to the computer when the camera is in its cradle. The media card in the camera does not fit in any of the available slots in the Cart's media reader.
- For patient confidentiality, be sure to erase all images from the camera as soon as they have been downloaded and saved into your case. If some of the images are left from a prior case, for example, then these images could accidentally be included in the current case.

Section 2 – Operation

2.1 Basic Procedure for Taking a Picture

The following is a basic sequence for taking a picture. This procedure assumes the camera batteries have been charged and the initial setup (e.g., date, time) has been performed.

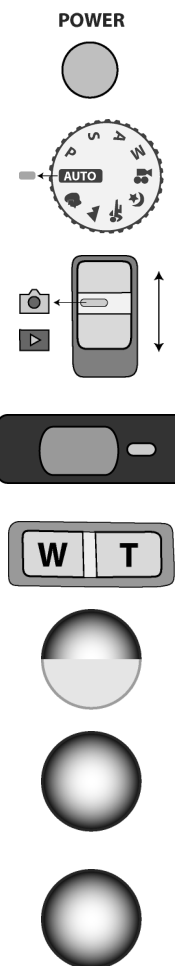1. Lift camera out of cradle.
2. Push the Power On/Off button. Lens will extend.
3. Set the Mode Dial to **AUTO**.
4. Set the Mode Switch to photography mode.
5. Using the viewfinder or the LCD display, aim the camera at the subject. For proper focusing, make sure the most important part of the image is centered in the viewfinder or LCD display.
6. Use the W/T buttons to zoom in or out so the subject is correctly framed, as needed.
7. Push the shutter button halfway down to obtain automatic focus and lighting adjustment.
8. If the viewfinder lamp shows steady green, press the shutter button fully to take the picture.
9. If the viewfinder lamp flashes green, it means one of the automatic adjustments (such as focus or shutter speed) may not be at an optimum setting. Proceed with taking the picture and see how it turns out.





2.2 Basic Procedure for Downloading an Image

The following is a basic sequence for downloading an image from the digital camera to the AFHCAN Cart. (Refer to the Software User's Manual for general information about the software.)

1. Ensure the camera power is off (press the Power On/Off button, if necessary).
2. Set the camera in the cradle. The indicator light on the cradle will turn to red, indicating the camera is charging.
3. On the touchscreen monitor, go to the *Add To Case* screen and press the **Digital Camera** button.
4. The following message will appear:

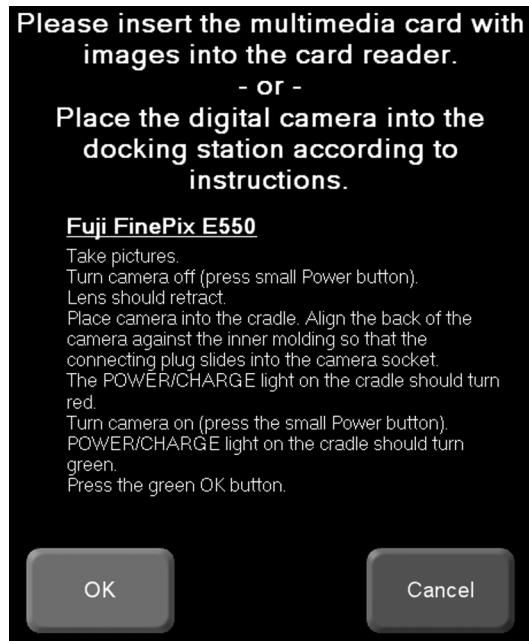 POWER




5. While still in the cradle, turn the camera on. The indicator light on the front of the cradle will turn to green, and a double-beep will sound.
6. Press the green **OK** button at the bottom of the message shown in step 4 above. A message similar to the following will briefly appear as any images on the camera download to the computer:

POWER





Copying File 1 Of 1
From Removable
Drive H

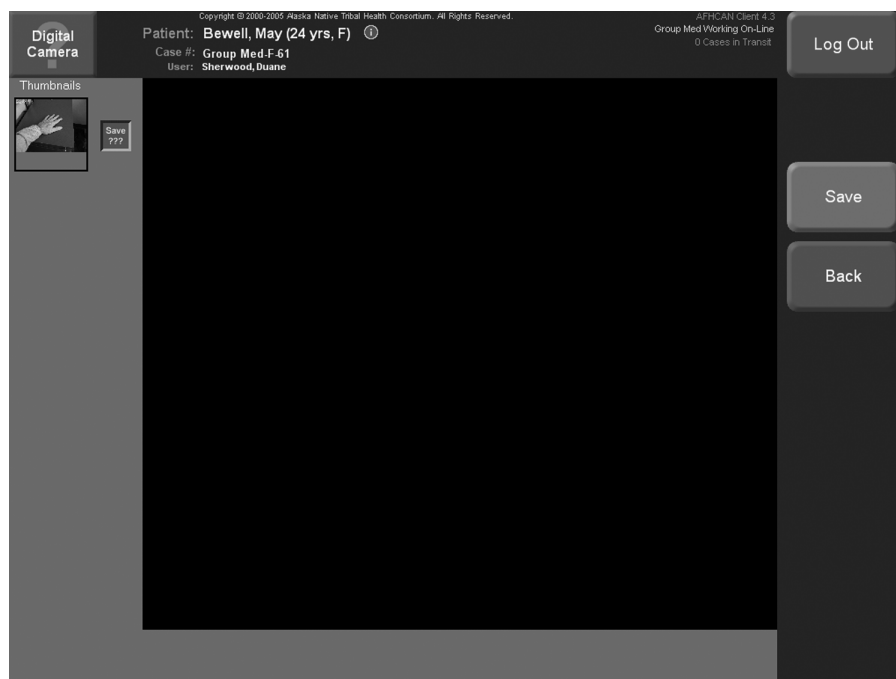7. On completion of the download, the **Digital Camera** screen will appear. The Digital Camera screen is very similar to the Case screen. At the left will be thumbnails of all the images that were downloaded.



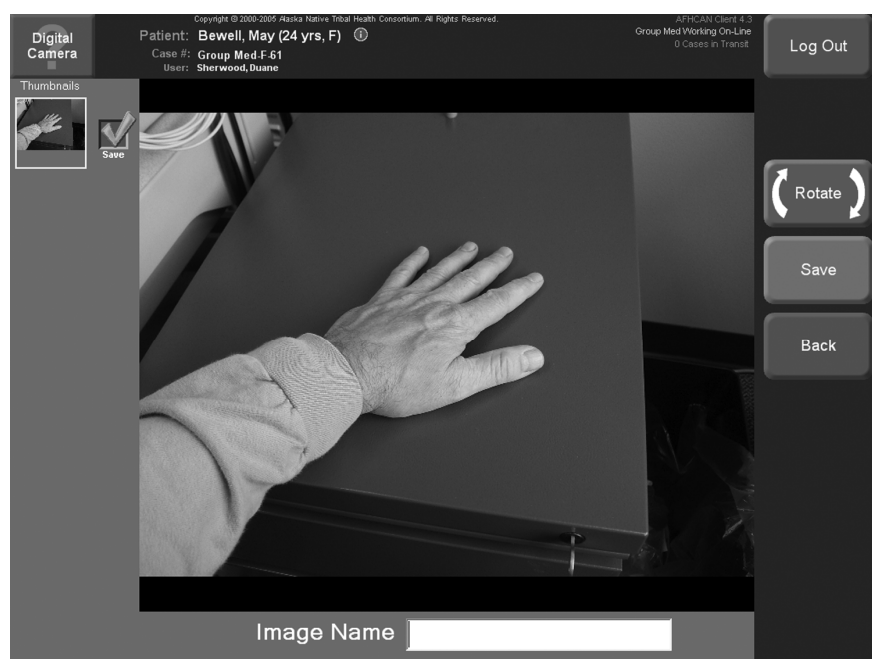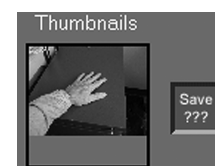8. Click on the thumbnail to view the image in the central area, and to open a text entry box for naming the image (as shown below).



9. All saved images must have a name. Type a useful name in the space provided.
10. On the touchscreen, press the **Save** button. All images with checks and names will be saved to the case, and the **Case** screen will be displayed.
11. Delete the images from the camera for patient confidentiality (see Section 2.4, Erasing Images from the Camera's Memory).

Image Name



2.2.1 Saving Multiple Images

The **Save** button on the **Digital Camera** screen is the marker between downloading images and adding them to the case. Pressing the **Save** button takes you to the **Case** screen. If you are saving more than one image, use the following procedure:

1. Click on the first thumbnail to bring up the image and open the **Image Name** data entry field. The selected thumbnail will have a yellow border.
2. Enter a useful name for the image.
3. Click on the next thumbnail. (Do **NOT** press **Save** yet.*)

Clicking on the next thumbnail does the following:

- saves the name of the first image with its thumbnail
 - opens the clicked thumbnail in the viewing area
 - clears the **Image Name** data entry field
4. Repeat until all images have names.
 5. Review the images. If any are to be discarded, click on a green checkmark to deselect the image.
 6. Press the **Save** button. All images with names and checkmarks will be added to the case, and the others will be discarded.

* If you do press the **Save** button before you have named all the images for a case, you can download them from the camera again and add them to the case.

2.3 Procedures for Using Other Camera Features

2.3.1 Setting Date and Time

Because a digital image is part of the patient's record, it is a good practice to make sure the camera's date and time are correct. The following is the procedure for setting the date and time.

1. Remove camera from cradle and turn it on.

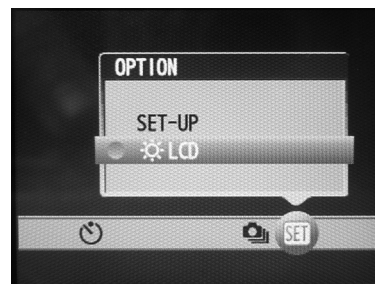
POWER




2. Push the **MENU / OK** button to activate the menu screens. (The exact menu you will see depends on the camera's settings.)




3. Press the right arrow as needed to get to the *Option* menu.



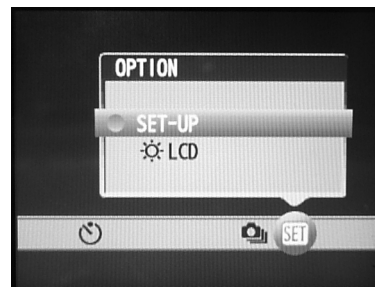4. Press the up arrow to get to *SET-UP*.



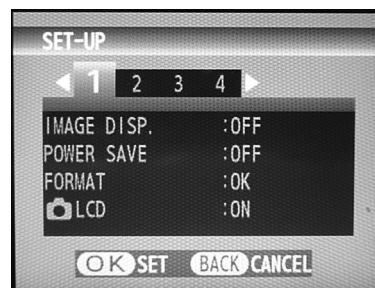5. Press **MENU / OK** to access the setup tabs.



6. Click the right arrow to get to the second page of setup menus.



7. Click the down arrow as needed to get to the **DATE/TIME** selection.



8. Click **MENU / OK** to select **DATE/TIME**.



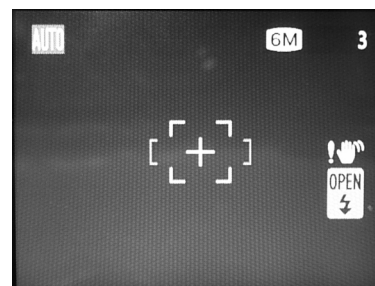
9. The current settable value will be shaded like a button. Push the up and down arrows to change the value.



10. To move to a different item, push the left and right arrows.




11. When all the settings are correct, press **MENU / OK**. The camera will return to photography or viewing mode, depending on the setting of the Mode Switch.



2.3.2 Viewing Images on Camera

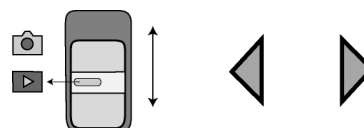You can view the images stored on the camera on the LCD screen by placing the Mode Switch in viewing mode (down). To move from one image to the next, use the left and right arrow buttons.



2.3.3 Taking Close-Ups with the Macro Function

To photograph something very small, you can move the camera very close to the subject by using the macro function. Activate the macro function by pressing the macro button (flower symbol) next to the left arrow button. A similar symbol will appear in the upper left corner of the LCD display. To deactivate the macro function, press the macro symbol again. With macro mode, the **W / T** (wide angle / telephoto) function has limited zooming capability.



Table 3 shows the focusing distances with macro activated and deactivated.

Table 3

Maximum and minimum focus distances for normal and macro modes

Camera Status	Minimum Focusing Distance	Maximum Focusing Distance
Normal	2 feet	infinity
Macro	3 inches	2.6 feet

2.3.4 Using the Flash

To activate the flash, push the flash pop-up button. To deactivate the flash, push the flash unit back into the camera body.



The flash function has several possible modes, three of which are available when the Mode Dial is set to **AUTO**. These three modes are:

- auto flash – camera decides whether flash is required
- forced flash – the camera will flash
- red-eye reduction – flash will be preceded by a series of low intensity flashes to give subjects' eyes a chance to adjust (when pupils are dilated, the reflected flash will show up as a red dot instead of a black pupil)

You can step through these modes by pressing the flash symbol located next to the right arrow. The mode will be indicated on the LCD display.



Using the flash at close range can result in a washed out image. If the subject has a reflective surface, a reflection of the flash can appear in the image. Try to angle the camera so the reflective surface is not facing directly towards the camera.

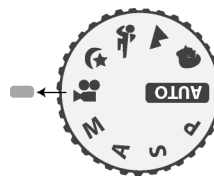
2.3.5 Special Features

The digital camera has many features for controlling the image. The Mode Dial has automatic settings for emphasizing the subject, for shooting scenery, for sports or action shots, and for night shots. Icons on the Mode Dial correspond to these features.

The letters on the Mode Dial allow you to control various functions manually. These features are beyond the scope of this manual, but are covered in the Fuji Owner's Manual. A copy of the Fuji Owner's Manual can be found at the following website: <http://home.fujifilm.com/products/digital/>.

2.3.6 Shooting Video Clips

The Fuji FinePix E550 digital camera can be used to record brief movie clips (including sound). There is an icon on the Mode Dial which represents a motion picture camera. Setting the Mode Dial to this icon allows the camera to shoot video clips. The video clips are saved on the media card as .AVI files. Video clips consume a lot of memory.



The procedure is as follows:

1. Turn the camera on.
2. Set the Mode Dial to video. The word "Standby" will be appear on the LCD display.
3. Push the shutter button completely down to start the video. A flashing red dot will appear on the LCD display to indicate recording is in progress.
4. To stop filming, push the shutter button completely down again.

POWER



The process for downloading a video clip into the AFHCAN software is virtually the same as downloading a digital image. There are two differences, however:

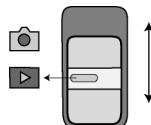
- the file size of a video clip may be quite large, which means it may take a few moments for the file to be downloaded to and from the server
- when the thumbnail for a video clip is selected, the video will play in the main viewing area, and playback controls will appear at the bottom of the screen

2.4 Erasing Images from Camera's Memory

In clinical photography, it is important for patient confidentiality and accurate medical records to ensure that images from the digital camera are erased as soon as the images have been safely downloaded. Once the desired images have been included in a case and the case has been sent, erase all images in the camera using the following procedure.

1. Turn the camera on.
2. Slide the Mode Switch down to view mode.

POWER



3. Press the **MENU / OK** button. The screen at the right will appear.



4. Press the up arrow twice to move the selection bar to ***ALL FRAMES***.



5. Press the **MENU / OK** button to select ***ALL FRAMES***.



6. The screen will say "ERASE ALL OK?" Press MENU / OK to confirm the decision to erase all images from the camera's media card.



Section 3 – Clinical Considerations

3.1 Characteristics of a Good Clinical Photograph

A good photograph tells a story. Table 4 shows various things to look for in a good photograph.

Table 4

Attributes of a poor, good, and best quality photograph

Poor	Good	Best
How Well is the Subject Framed?		
<ul style="list-style-type: none"> • frame (image) includes only part of the subject • subject occupies only a small part of frame 	<ul style="list-style-type: none"> • frame includes all of the subject 	<ul style="list-style-type: none"> • subject fills most of the frame • subject is centered in the frame • camera was parallel to the subject
Does the Background Enhance the Subject or Compete with It?		
<ul style="list-style-type: none"> • background blends in with the subject • background is cluttered or busy • background includes examiner, clothing, jewelry, or equipment 	<ul style="list-style-type: none"> • it is easy to distinguish the subject from the background • background clutter does not detract from subject 	<ul style="list-style-type: none"> • background consists of neutral colors that provide good contrast • subject area is adequately exposed and/or draped • the examiner, clothing, jewelry, and equipment are not visible in the photograph
Does the Image Have Adequate Resolution?		
<ul style="list-style-type: none"> • image appears blurred, and details are not available 	<ul style="list-style-type: none"> • image is sharp and clear 	<ul style="list-style-type: none"> • good image quality is maintained even when enlarged in viewer to 1.5 to 2.0 times normal size
Does the Image Provide Perspective?		
<ul style="list-style-type: none"> • unable to determine the size or distribution of the lesions based on the image • it is hard to tell which part of the body is in the image 	<ul style="list-style-type: none"> • something in the photo allows the size of the lesion to be determined • a sufficient amount of the subject is in view to identify the area of the body and extent of the lesion or injury 	<ul style="list-style-type: none"> • the photo includes a measuring device so size can be accurately estimated • left and right, or normal and affected parts, are shown together so they can be compared • additional photos are included in the case to show close-ups as well as perspective information • titles of photos add helpful information

3.2 Common Mistakes

- be sure mode switch is set to the camera icon (up)
- be sure Mode Dial is set to **AUTO** for most photography
- be sure there is adequate lighting when not using the flash
- when pressing the shutter button, pause halfway down to allow autofocus
- include both perspective views that include a wide area, and close-ups that show the problem area in detail
- hold camera steady while focusing and shooting

3.3 Tips and Tricks

- use the macro feature for close-ups (within two feet) of wounds, lesions, rashes, etc.
- use white, neutral gray, or a clear blue background
- use the same background for every shot in a series
- remove distractions in the background
- remove jewelry
- remove clothing and drape patient
- if examiner's hands must be in the picture, consider gloving
- compare right and left
- include something in image to provide perspective and indicate relative size, such as a ruler or measuring tape
- hold the camera parallel to the subject
- show different views such as
 - whole patient or larger area (to show distribution of a rash, for example)
 - close-up view of same area for details

Section 4 – Routine Maintenance

4.1 Changing the Batteries

The batteries provided with the camera are rechargeable. Keeping the camera in the cradle with the Cart powered up ensures the batteries are charged. Normally the batteries do not need to be changed.

Two important precautions regarding batteries:

- avoid opening the battery compartment unnecessarily
- never attempt to recharge regular (non-rechargeable) batteries

If the rechargeable batteries wear out, they can be replaced as follows:

1. Push down on the battery compartment release button (refer to Figure 6), and simultaneously push the compartment cover in the direction indicated by the arrows.
2. Open the hinged battery compartment cover (refer to Figure 8).
3. Remove the batteries or the battery pack.
4. Install new batteries ensuring that correct polarity is observed.
5. Lower the hinged battery compartment cover, push down to position the batteries and align the cover, and slide back into position (opposite the direction of the arrow).

4.2 Replacing the xD Media Card

In a clinical setting with the AFHCAN Cart, it should never be necessary to remove the xD media card. However, if it becomes necessary to do so, the following is the procedure:

1. Open the battery compartment as described in section 4.1.
2. Push down on the xD media card to unlatch it. It will pop up slightly.
3. Pull the xD media card out of its slot.
4. Insert an xD media card into the slot with the gold tabs down and towards the camera body.
5. Push the xD media card down into its slot until it clicks into place.
6. Close the battery compartment cover.

Index

- adapter ring
 - gripping knobs (image), 2
 - release button (image), 2
- Add To Case screen, 12
- arrow buttons. *See* up/down or left/right arrow buttons
- arrow symbol. *See* flash mode button
- BACK button (hw)
 - function, 6
 - general reference, 6
 - image, 2
 - leaving menu unchanged, 8
- battery
 - general reference, 11
 - image, 4
 - recharging, 7, 23
 - replacement procedure, 23
 - required type, 10
 - wrong type, 10
- battery compartment
 - cover open (image), 4
 - precaution, 10
 - release button, 23
 - release button (image), 3
- camera. *See* digital camera
- Case screen, 13, 14
- characteristics of a good photograph, 21
- connector
 - A/V OUT (image), 3
 - DC Power Input (image), 3
 - USB port (image), 3
- cradle
 - advantages, 10
 - align camera gently, 7
 - connections provided, 7
 - function, 7
 - general reference, 11, 12, 15
 - maintaining charge on batteries, 23
 - mounted on V1 cart (image), 7
- cradle indicator light
 - green, 7, 12
 - image, 7
 - red, 7, 12
- date and time, 9, 11, 15
- digital camera
 - bottom view (image), 3
 - front view (image), 2
 - functional description, 1
 - left side (image), 3
 - main components, 1
 - rear view (image), 2
 - right side (image), 3
 - standard control settings, 9
 - top view (image), 1
- Digital Camera button, 12
- Digital Camera screen, 13
- docking station. *See* cradle
- exposure compensation button
 - image, 2
- F button. *See* photo mode button
- flash control sensor
 - image, 2
- flash mode button
 - function, 6
 - image, 2
 - selecting modes, 17
- flash pop-up button
 - function, 5
 - image, 2
 - procedure, 17
- flash unit
 - extended (image), 4
- flower symbol. *See* macro button
- focus range
 - macro mode, 17
 - normal, 17
- functional description. *See* (device), functional description
- Image Name data entry field, 14
- LCD display
 - aiming camera, 5, 11
 - flash mode symbol, 17
 - flashing red dot, 18
 - image, 2
 - macro symbol, 17
 - Standby message, 18
 - viewing images, 5
 - viewing menus, 6
 - viewing pictures, 16
 - when in cradle, 5
- LCD monitor. *See* LCD display
- LCD screen. *See* LCD display
- left/right arrow buttons
 - function, 6
 - selecting menu, 8
- lens
 - extended (image), 4
 - retracted and covered (image), 2
- macro button
 - function, 6
 - image, 2
- macro function
 - appropriate use, 22
 - general description, 17

- macro mode
 - activating and deactivating, 17
 - focusing range, 17
- media card
 - avoid unnecessary access, 10
 - compartment open (image), 4
 - image, 4
 - replacement procedure, 23
- media compartment
 - release button (image), 3
- MENU / OK button
 - accessing menus, 8
 - function, 6
 - functional variations, 9
 - general reference, 6
 - image, 2
 - procedure, 15, 16, 19
 - selecting menu items, 8
- menu control buttons
 - BACK. *See* BACK button (hw)
 - flash arrow. *See* flash mode button
 - left/right arrows. *See* left/right arrow buttons
 - macro flower. *See* macro button
 - MENU / OK. *See* MENU / OK button
 - up/down arrows. *See* up/down arrow buttons
- menus
 - controls affecting access, 9
 - features of (image), 8
 - general description, 8
- microphone
 - image, 2
- mode
 - flash, 6, 17
 - overall camera function. *See* mode switch
 - shutter control. *See* mode dial
- mode dial
 - function, 5
 - general reference, 17, 22
 - image, 1
 - procedure, 11
 - selecting video, 18
 - special features, 17
 - standard setting, 9
- mode switch
 - function, 5
 - general reference, 16
 - image, 2
 - procedure, 11, 18
 - standard setting, 9, 22
 - viewing images, 16
- OK button, 12
- patient confidentiality, 10
- photo mode button
 - function, 5
 - image, 2
 - standard setting, 9
- power distribution, 7
- power distribution strategy, 7
- Power On/Off button
 - function, 5
 - image, 1
 - procedure, 11, 12
- procedure
 - changing batteries, 23
 - changing media card, 23
 - downloading an image, 12
 - erasing images from camera, 18
 - saving images to case, 14
 - setting date and time, 15
 - shooting video, 18
 - taking a picture, 11
 - using macro feature, 17
 - using the flash, 17
 - viewing images on LCD display, 16
- right/left arrow buttons
 - procedure, 15, 16
- Save button, 14
- self-timer lamp
 - image, 2
- shutter button
 - automatic focus, 11, 22
 - function, 5
 - image, 1
 - starting video capture, 18
 - stopping video capture, 18
 - taking picture, 11
- speaker
 - image, 3
- telephoto. *See* zoom
- tripod mount
 - image, 3
- up/down arrow buttons
 - function, 6
 - image, 2
 - procedure, 15, 16, 19
 - selecting menu item, 8
- viewfinder
 - function, 5
 - image, 2
 - procedure, 11
- viewfinder lamp
 - function, 5
 - image, 2
 - indicating flashing green, 11
 - indicating steady green, 11
- viewfinder window
 - image, 2
- W / T button. *See* zoom button
- wide angle. *See* zoom
- wrist strap attachment bar
 - image, 3
- xD media card. *See* media card

zoom button
 function, 5
 image, 2
 limits with macro mode, 17
 procedure, 11

